

USBINT2 - Intelligent addressable USB analogue systems panel interface



The analogue systems panel interface (USBINT2) is a universal serial bus converter that provides conversions from RS232 to USB, TTL to USB or TTL to RS232.

These options provide the connectivity required between a PC and intelligent addressable control panels, wireless control panels, and wireless survey tools.

Features and benefits


- Intelligent addressable control panel to PC site installer connection using the RS232 to USB configuration
- Wireless control panel to PC site installer connection using the RS232 to USB configuration
- Wireless control panel to PC wireless live monitor connection using the TTL to USB/RS232 configurations
- Wireless survey tool to PC survey tool connection using the TTL to USB/RS232 configurations
- Simple PC driver installation
- Simple DIP switch configuration

Specifier's guide

2.10 Test Equipment

Configuration settings

Switch positions					
4	3	2	1	Mode	Usage
OFF	OFF	OFF	OFF	TTL to USB	<ul style="list-style-type: none">• Wireless panel to PC live monitor• Wireless survey tool to PC survey tool
ON	ON	OFF	OFF	TTL to RS232	<ul style="list-style-type: none">• Wireless panel to PC live monitor (no USB available)• Wireless survey tool to PC survey tool (no USB available)
OFF	OFF	ON	ON	RS232 TO USB	<ul style="list-style-type: none">• Intelligent addressable panel to PC Site Installer• Wireless panel to PC Site Installer

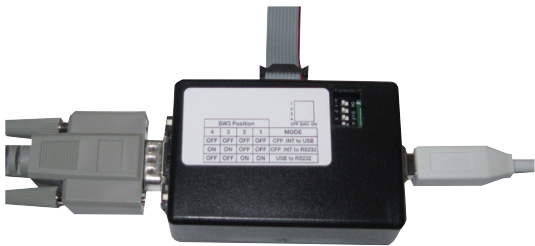

Cable connections



TTL to USB -
Wireless survey tool connection



TTL to RS232 -
Wireless survey tool connection
(serial link)



RS232 to USB -
Wireless panel to PC
(site installer)

NOTE: Please use a USB cable shorter than 3 meters.

Kit contents

1 x USBINT2
1 x Driver CDROM
1 x USB Cable
1 x RS232 Cross-Over Cable
1 x TTL Cable

Catalogue numbers

Description	Code
Usb analogue systems panel interface	USBINT2