

Sounder Base MAS850



MAS850 with cover fitted



MAS850 incorporates standard detector base



MAS850 sounder base

Overview

The intelligent addressable Menvier sounder base has been developed specifically to operate with the latest generation of Menvier intelligent addressable panels and to complement the latest generation of Menvier intelligent addressable sensors.

The MAS850 sounder base incorporates a sensor mounting base, a sensor can be fitted to the sounder base or alternatively an optional cover plate can be used to enable the sounder to operate as a dedicated discreet stand alone sounder.


Features

- Integral sensor mounting base
- Can be used with a sensor as a sounder base or stand alone sounder
- Optional cover plate available

Benefits

- First fix base
- Selectable tones controlled by the panel
- Adjustable volume controlled by the panel

Dimensions

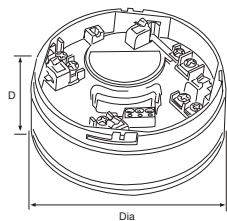

Dia (mm)	D (mm)
102	40

Technical Specification

Code	MAS850
Description	Sounder base
Standards	EN54 Pt3
Specification	
Operating Voltage	17V dc to 32V dc
Standby Current	< 320µA
Tones (set by panel)	Continuous: 910Hz Pulsed: 910Hz / 0Hz pulse 1Hz Two tone: 610 / 910Hz @ 1Hz cycle Slow whoop
Sound Output @ +/-3dB (set by panel)	Low volume : 84dB at <4mA Medium volume : 92dB at <8mA High volume : 95dB @ <12mA
Environmental	
Operating Temperature	-10 to +55°C
Humidity (Non Condensing)	0 to 95% RH
Physical	
Construction	PC/ABS
Colour	White
Dimensions (Dia x D)	120mm x 40mm
Weight	0.2kg
Ingress Protection	IP40
Compatibility	
Suitable for use with	Menvier intelligent addressable fire systems

Installation


1. Installation is simple using first fix base.
2. First fix base is fixed to mounting surface via 2 fixings holes.
3. Cables enter through aperture in base (rear entry only)
4. Main body is then clipped into place on base, main body locks into place when pressed into position.
5. Cables pass through aperture in sounder body and terminate at the front.
6. Connections are to connector block on front of main sounder body.

7. Sensor or cover plate is then fixed to sounder.
8. Sensor or cover plate can be locked in place if required.

System Functionality

1. Volume and tone are set by control panel, no need to access sounder to alter setting.
2. Soft addressed.

Standard Connection

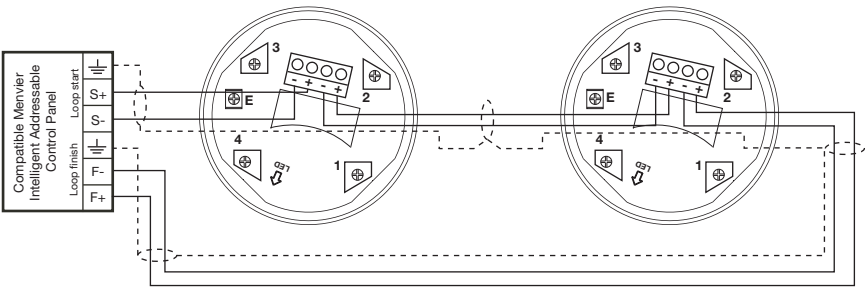

WARNING:
Do NOT use high voltage testers if ANY equipment is connected to the system.
Earth screen must be continuous along entire length of loop.

NOTE:
Base terminal 1, 2, 3 and 4 not used. All wiring terminates as shown above.

Product Codes

Code	Description
MAS850	Intelligent addressable sounder base
MASC	Sounder cover plates (pack of 5)